


Heavy Duty Industrial Depth Sounder

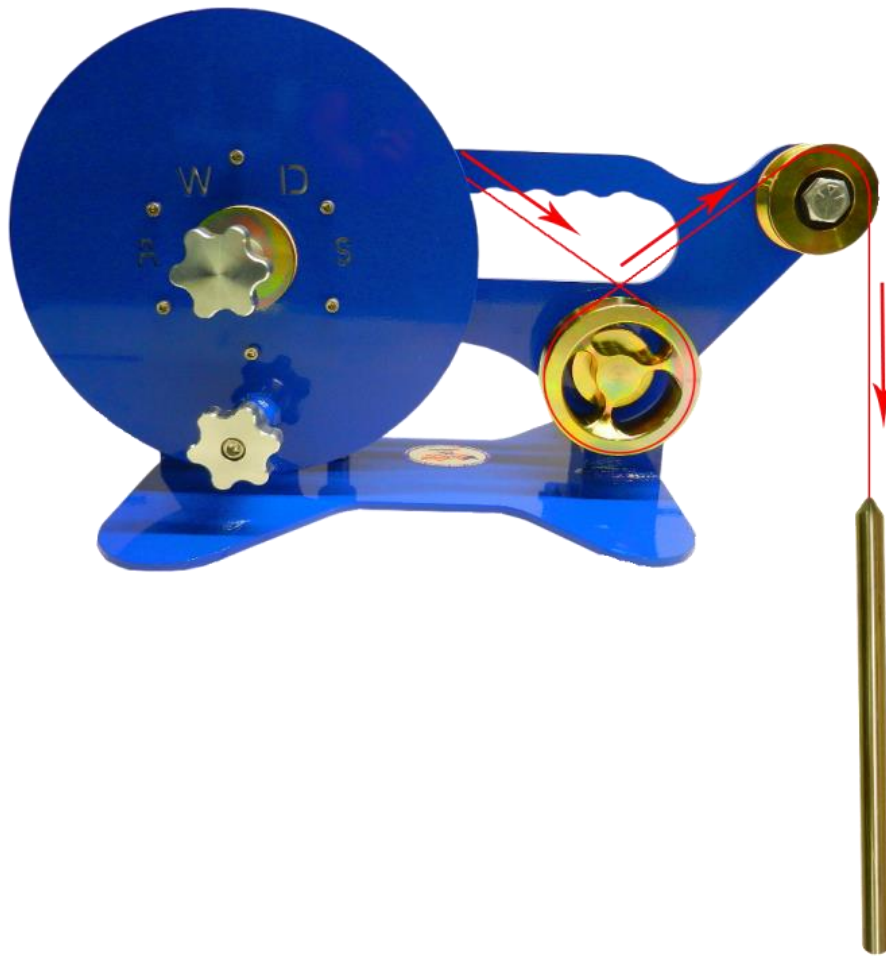

Operation:

1. Thread wire rope around measure pulley and over idler pulley as shown
2. Lower weight to top of bore hole, set counter to zero by turning reset knob on counter.
3. Lower weight into bore hole - This can be done by placing hand on top of the reel applying pressure to control the lowering of the weight, always keep the wire rope in tension around the measure pulley.
4. You will "feel" the weight hit bottom, read depth on counter.
5. It is good practice to measure both going down and coming up to verify a good read.

Maintenance:

- All bearings are sealed and need no lubrication.
- Clean measure pulley prior to each use, do not allow mud and dirt to "cake up" as this will give inaccurate readings.
- The wire rope used is precision wire, only use approved wire rope. Contact the distributor for wire rope and replacement parts.